

Bruer® Scale Dosing Cup User Manual



Product Warranty


- 365 days warranty from the date of purchase. Proof of purchase required.
- If there is a quality issue during warranty period, please contact customer service at <https://www.brüer.co/contact/> for help
- The following circumstances are not covered by warranty:
 - Scale component damaged by unconventional use
 - Product damaged due to not following user manual
 - Product damaged caused by self-disassembly or self-repair
 - Damage to battery caused by not using or recharging for long periods
 - Product damaged caused by contact with liquids

Cautions

-  Given the development of product, firmware and images of the item are indicative only, and slight variations to item may occur during manufacture: Please refer to actual product.
- The Scale Dosing Cup is not waterproof. Do not allow contact with liquid. Keep charging port free of debris and liquids.
 - The Scale Dosing Cup has a maximum weighing capacity of 500g. Exceeding this may cause permanent damage to the weighing mechanism.
 - To maintain a healthy battery lifespan, please use 5V/1A charger. Do not use fast charger and do not use The Scale Dose Cup during charging.
 - Please use the Scale Dosing Cup on flat and stable surface.
 - Sharp knocks or heavy impacts may damage the weighing mechanism inside the Scale Dosing Cup.

Warranty may be voided if cautions are not followed.

Product Components

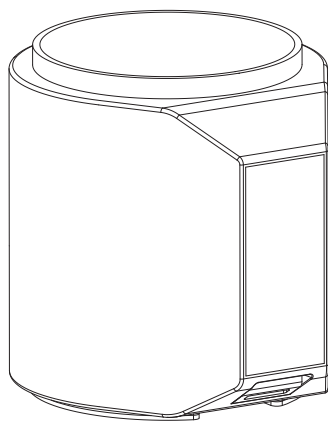


A


A Scale Dosing Cup x1

B Type-C USB Cable x1

C User Manual x1

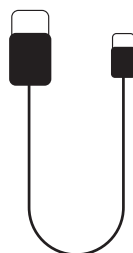

B

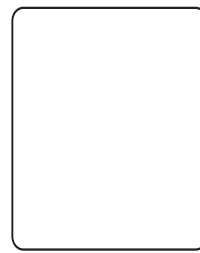

C

Product Specification

- Product name: Scale Dosing Cup
- Product size: 85*72*77.5mm
- Model No.: BRUER-SDC
- Units: grams
- Division: 0.1g up to 99.9g
- Display type: LED digit
- Max. capacity: 500g
- Battery: in built rechargeable lithium battery 500 mAh capacity
- Charging method: TYPE-C USB cable + 5VDC/1 A adapter (not included)

Display Area

① Weight Area

② Battery Display

③ Unit Area



Charging Display

When charging battery light will flash, once scale fully charged the battery light will cease flashing.


Low Battery Display

The battery light will flash when battery is low & requires charging. The Scale Dosing Cup will turn off automatically if battery is allowed to run too low.

Button Description

Key on/selection key ●

1. Press and hold for 0.5 seconds to turn on the device. Press and hold for 1 second to turn off the device.
2. After device is turned on and stabilized, touch once to tare. Double touch to turn on/off sound.
3. Automatic shut down time setting: When the device displays 88.8, press and hold the power button for 2 seconds to enter the time shut down setting. There will be 4 options, including nc (no automatic shut down), 30 seconds, 60 seconds or 120 seconds. Touch once for selection then press and hold for 2 seconds to lock in the selection.

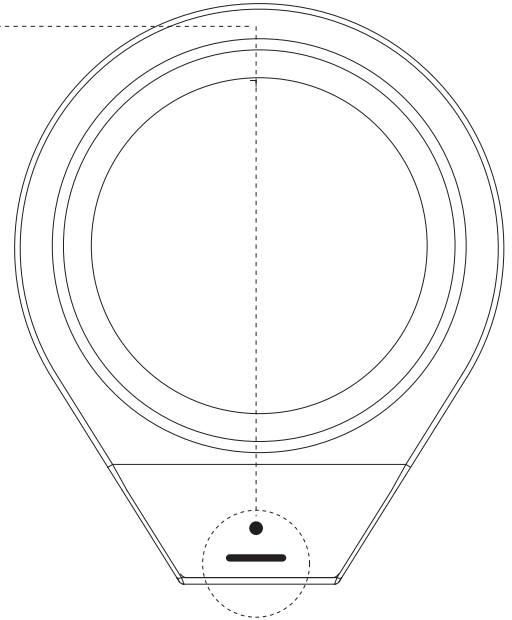

Warnings

Err

The objects on the Scale Dose Cup exceed the max. capacity of 500g.

Solution

The max. capacity of the Scale Dose Cup is 500g. Exceeding this may cause permanent damage to the weighing mechanism.

LO

The Scale Dose Cup is low battery.

Solution

Recharge the Scale Dose Cup as soon as possible.

Unst

The Scale Dose Cup is unstable.

Solution

Place the Scale Dose Cup on a flat and stable surface.